

# **QUICK CONNECT GUIDE**

# How to set up your DSL INTERNET

Modem & Wi-Fi Router

Your WI-FI PASSWORD is the last 9 characters of the SERIAL NUMBER (S/N) (does not include dashes) found on the BOTTOM of the modem. ALL LOWERCASE.

NEED HELP? Visit us at execulink.ca/support Or call us 24/7 at 1.877.393.2854

# **STEP 2: CONNECT TO MODEM**

Connect one end of the grey telephone cord into the grey DSL port in the back of the modem and the other end into your wall jack, which should be no further than six feet away.

Please note: Telephone extension cords should not be used to connect the modem to the telephone jack.



#### **STEP 1: DOUBLE CHECK**

Make sure you have the following components in your High Speed Internet package.

# High Speed Modem & Power Adapter

NOTE: You will have one of the modems shown here, each with a similar setup. For simplicity, we will only show 1 modem type throughout the quide.





Comtrend CT-5072





Wi-Fi Router & Power Adapter




Ethernet Cable & Telephone Cable



## **STEP 3: POWER ON MODEM**

Connect the power adapter to the modem. Turn on the modem and wait up to fifteen minutes while it downloads software updates.

Please note: It is important NOT to turn off the modem while this is happening as it may cause malfunctions.

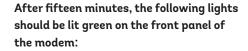

- Power
- ADSL or DSL
- Internet



# STEP 4: CONNECT MODEM & ROUTER

- 1. Place your router within reach of the modem.
- 2. Connect one end of the Ethernet cable to the WAN port in your router and the other end to the yellow Ethernet port in your modem.



### **STEP 5: POWER UP ROUTER**

- 1. Plug in the router's power adapter and wait up to fifteen minutes.
- 2. After fifteen minutes the following lights should be lit green on the front panel of the router:
  - Power (on)
- WIFI (on or blinking)
- Internet (on or blinking)

Please note: It is important NOT to turn off the router while this is happening as it may cause malfunctions.



To customize your wireless settings including password, network names and more, visit execulink.ca/myexeculink.

**NEED HELP?** 

CALL 1.877.393.2854 VISIT SUPPORT.EXECULINK.CA



# **QUICK CONNECT GUIDE**


# How to set up your DSL VOIP PHONE

Only complete these steps after establishing an Internet connection and after your Phone service has been activated. Your activation date is provided by an Execulink representative.

NEED HELP? Visit us at execulink.ca/support Or call us 24/7 at 1.877.393.2854

### **STEP 2: ADD FILTERS**

- Place a telephone filter between every device in your home that plugs into a phone jack, except the modem (e.g. telephones, fax machines, and alarm systems although your alarm system may require its own specific type of filter).
- 2. The phone filter plugs into the wall (or DSL port of the duplex splitter, if required in your setup) and the devices plug into the filter.

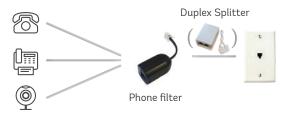

If you require assistance with your setup, please call us at 1.877.393.2854.

## **STEP 4: PLUG IN YOUR PHONE**

- Plug your telephone cord into the Phone 1 port on the back of the ATA and the other end into your phone.
- If you use a cordless telephone, please ensure the cordless base station's power adapter is also plugged into a working electrical outlet.



#### STEP 1: DOUBLE CHECK

Make sure you have the following components in your DSL Phone package.

VoIP ATA & Power Adapter

Ethernet Cable

Telephone filter(s) and/or duplex splitter, if required

## **STEP 3: SET UP ATA**

- Plug a supplied Ethernet cable into the yellow ETH1 port of the router.
- 2. Plug the other end of the cable into the Network port of the VoIP ATA.
- Plug in the ATA's power adapter into the back of the ATA and the other end into a wall outlet.
- Check to ensure the ETH1 light on the router has turned on and that the power and Internet light ( ) on the VoIP ATA are also lighting up green. It is normal for both these lights to flash.



Please note: It can take up to 10 minutes to sync these devices.

#### STEP 5: TEST YOUR PHONE

- Pick up your phone and check for a dial tone. Make an outgoing call to test.
- a) If you are keeping your phone number, dial 1-877-393-2854. If there
  is no answer, please leave a voicemail message with your name, phone
  number and tell us if the ATA is connected. An Execulink representative
  will call you back within 1 business day at which point your phone will
  be fully operational.
  - b) If you are using a new phone number, congratulations— your new phone is ready for use!

