

## QUICK CONNECT GUIDE

# MESH WI-FI BEACON

Follow these steps after you have set up your Premium Wi-Fi 6 Beacon and you are connected to the Internet.

**NEED HELP?** Visit us at [execulink.ca/support](https://execulink.ca/support) For Wi-Fi troubleshooting try our app, Execulink Helps.

### CHOOSE YOUR METHOD

There are two methods to connect your Mesh Wi-Fi Beacon. You can connect it through the Nokia WiFi app, or through the hardware itself.

We have shown both methods in the following steps, 2A and 2B.

### STEP 1: DOUBLE CHECK

Make sure you have the following components in your Mesh Wi-Fi Beacon package. You will require a Premium Wi-Fi Beacon to complete setup.

Mesh Wi-Fi Beacon, Power adapter and Ethernet cable



 
 
Premium Wi-Fi Beacon and Power adapter



### STEP 2A: CONNECT USING APP

If your Premium Wi-Fi Beacon is already set up in the Nokia WiFi App, then this is an easy method to add your Mesh Wi-Fi Beacon.


1. Within the Nokia WiFi App, click on 'Network', then WiFi points, and then 'Add WiFi point'
2. The app will then help you identify the right place for your Beacon and guide you through the set-up steps.

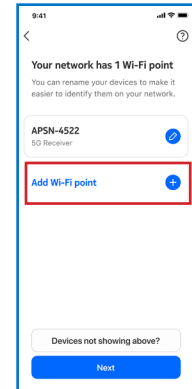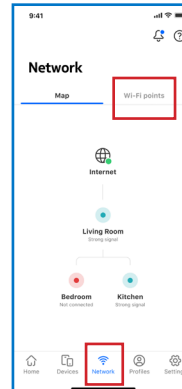

### STEP 2B: CONNECT WITHOUT APP

Use this method to connect your Mesh Wi-Fi Beacon without using the app.

 1. Plug in the power adapter and connect it to your Mesh Wi-Fi Beacon. Press the power button to turn it on.
2. Using the Ethernet cable provided in the box, connect the blue WAN port on the back of the Mesh Wi-Fi Beacon to the yellow LAN port on the back of your Premium Wi-Fi 6 Beacon that you already have set up.

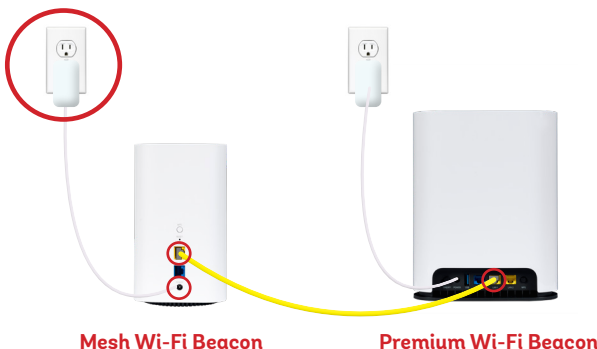

### STEP 2B: CONTINUED

1. Once the LED light on the front of your Mesh Wi-Fi Beacon turns blue-green, you can disconnect the Ethernet cable from the Mesh Wi-Fi Beacon, power it off, and place it in the room that you want to use it.
2. For optimal performance, place your Mesh Wi-Fi Beacon on an elevated surface rather than the floor and keep it away from other wireless and household appliances as they can interfere with your wireless signal.
3. Power on the Mesh Wi-Fi Beacon and when it's up and running it will show the blue-green LED once again.



**NEED HELP?**

CALL 1.877.393.2854  
VISIT [SUPPORT.EXECULINK.CA](https://support.execulink.ca)